 
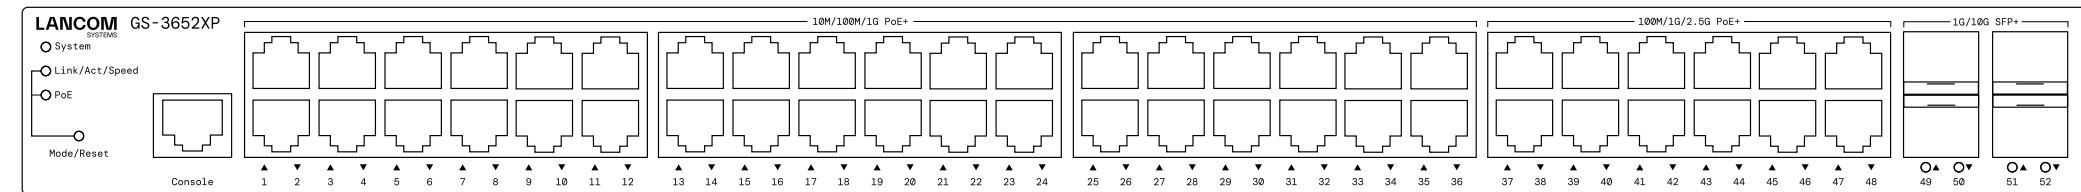 


# Hardware Quick Reference

## LANCOM GS-3652XP

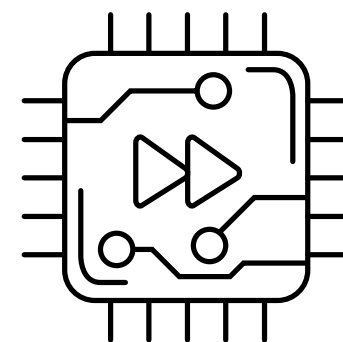 


- ① Configuration interface (Console)
- ② TP Ethernet interfaces 10M / 100M / 1G PoE+
- ③ TP Ethernet interfaces 100M / 1G / 2.5G PoE+
- ④ SFP+ interfaces 1G / 10G
- ⑤ Power connector (device back side)
- ⑥ ATTENTION: High touch current possible! Connect to earth before connecting the power supply.


**① Configuration interface (Console)**  
Connect the configuration interface via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch.




**② TP Ethernet interfaces 10M / 100M / 1G PoE+**  
Use Ethernet cables to connect the interfaces 1 to 36 to your PC or a LAN switch.



 
**③ TP Ethernet interfaces 100M / 1G / 2.5G PoE+**  
Use Ethernet cables to connect the interfaces 37 to 48 to your PC or a LAN switch.



 **④ SFP+ interfaces 1G / 10G**  
Insert suitable LANCOM SFP modules into the SFP+ interfaces 49 to 52. Choose cables which are compatible with the SFP modules and connect them as described in the module's documentation.



 **⑤ Power connector (device back side)**  
Supply power to the device via the power connector. Please use the IEC power cable supplied or a country-specific LANCOM Power Cord.



**⑥ ATTENTION: High touch current possible! Connect to earth before connecting the power supply.**

**Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!**

**Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.**

**The power plug of the device must be freely accessible.**

 
**Please note that support for third-party accessories (SFP and DAC) is not provided.**



### Please observe the following when setting up the device

- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device
- Keep all ventilation slots on the side of the device clear of obstruction
- Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets. If an additional rear support surface is required for more stable mounting of the switch, please use the LANCOM Switch Rack Mount L250, which is available as an accessory.

## Mounting & connecting

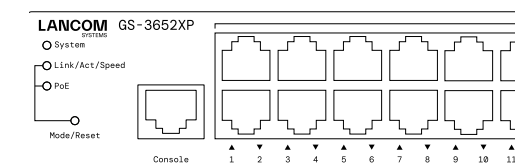

**A**

### A System / Link/Act/Speed / PoE LED

System: off	Device powered off
System: green	Device operational
System: red	System error, please check syslog / error log
Link/Act/Speed: green	Port LEDs show link / activity / port speed status
PoE: green	Port LEDs show PoE status

### B Mode/Reset button

Short press	Switching the port LED display
~5 sec. pressed	Device restart
Pressed until all port LEDs glow	Configuration reset and device restart

 
### C TP Ethernet ports 10M / 100M / 1G PoE+

#### LEDs switched to Link/Act/Speed mode

Off	Port inactive or disabled
Green	Link 1000 Mbps
Green, blinking	Data transfer, link 1000 Mbps
Orange	Link < 1000 Mbps
Orange, blinking	Data transfer, link < 1000 Mbps

#### LEDs switched to PoE mode

Off	Port inactive or disabled
Green	Port enabled, power supply to c-connected device
Orange	PoE function error

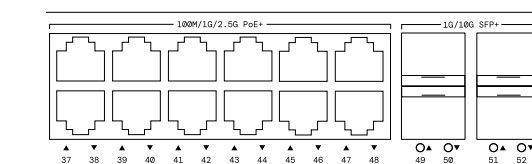

**D**

### D TP Ethernet ports 100M / 1G / 2.5G PoE+

#### LEDs switched to Link/Act/Speed mode

Off	Port inactive or disabled
Green	Link 2500 - 1000 Mbps
Green, blinking	Data transfer, link 2500 - 1000 Mbps
Orange	Link < 1000 Mbps
Orange, blinking	Data transfer, link < 1000 Mbps

#### LEDs switched to PoE mode

Off	Port inactive or disabled
Green	Port enabled, power supply to connected device
Orange	PoE function error

### E SFP+ ports 1G / 10G

Off	Port inactive or disabled
Blue	Link 10 Gbps
Blue, blinking	Data transfer, link 10 Gbps
Green	Link 1 Gbps
Green, blinking	Data transfer, link 1 Gbps

<b>Hardware</b>	
Power supply	Internal power supply unit, PoE based on IEEE 802.3af and IEEE 802.3at
Environment	Temperature range 0-40° C; short term temperature conditions 0-50°C; humidity 10-90%; non-condensing
Housing	Robust metal housing, 1 HU with removable mounting brackets for 19" installation, network connectors on the front, 442 x 44 x 375 mm (W x H x D)
Number of fans	1

<b>Interfaces</b>	
ETH	36 TP Ethernet ports 10 / 100 / 1000 Mbps PoE+ 12 TP Ethernet ports 10 / 100 / 2500 Mbps PoE+
SFP+	4 SFP+ ports 1 / 10 Gbps 52 concurrent ports in total

<b>Package Content</b>	
Mounting brackets	2 19" brackets for rack mounting; If an additional rear support surface is required for more stable mounting of the switch, please use the LANCOM Switch Rack Mount L250, item no.: 61432, which is available as an accessory.
Cables	1 IEC power cord, 1 serial configuration cable 1.5 m

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)