

R&S® LANCOM RJ45/USB Serial Adapter

USB adapter cable for configuring the R&S® LANCOM ISG and 19xx series and 2100EF via the serial RJ45 interface



To configure your R&S® LANCOM router via the command line (CLI), simply connect the R&S® LANCOM RJ45/USB Serial Adapter to your PC or laptop and the RJ45 serial configuration port. This way you do not need any additional serial adapters for the USB console connection.

- ▶ USB adapter cable for connecting a configuration computer to the devices of the R&S® LANCOM ISG and 19xx series and 2100EF
- ▶ Supports direct USB console connection without additional serial adapters
- ▶ USB 2.0 (downward compatible to USB 1.1)
- ▶ Compatible with Windows 10 and 11, MAC and Linux

R&S® LANCOM RJ45/USB Serial Adapter

Mechanical Information	
Connectors	1 x USB Type-A - 1 x serial RS-232 RJ45
Length	300 cm
Color	Light Blue
Support	
Warranty extension	2 years
Compatibility	
Compatible devices	<ul style="list-style-type: none"> ▶ R&S® LANCOM 1900-Serie ▶ R&S® LANCOM 2100EF ▶ R&S® LANCOM ISG-5000 ▶ R&S® LANCOM ISG-8000
Item number(s)	
RJ45/USB Serial Adapter	61659

Rohde & Schwarz Networks and Cybersecurity GmbH
 Adenauerstr. 20/B2
 52146 Wuerselen | Germany
info.rs-nc@rohde-schwarz.com | www.rohde-schwarz.com/networks-and-cybersecurity

R&S and Rohde & Schwarz are trademarks of Rohde & Schwarz GmbH & Co. KG, registered or used, among others, in Germany, the EU, the USA, China, and other countries. Other names or designations used may be registered trademarks of different companies or owners. This document contains forward-looking statements regarding products and product features. The publisher reserves the right to change these at any time without stating reasons. No liability is accepted for technical inaccuracies or omissions. 06/2026

ROHDE & SCHWARZ
 Make ideas real

