
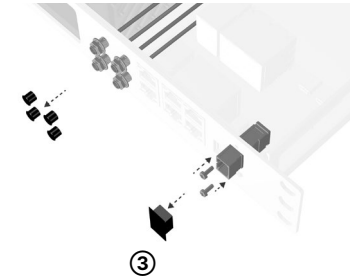


LANCOM CPE blackline Rack Mount Plus

Montageanleitung | Mounting instructions

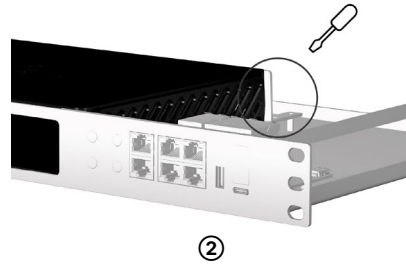

Erläuterungen

- Verwenden Sie die beiliegenden Haltewinkel und die M3×6 Torx-Kombi-schrauben mit Fächerscheiben, um das LANCOM Gerät im CPE backline Rack Mount Plus zu fixieren (①, ②). Die Frontblende des Gerätes liegt korrekt **hinter** dem Ausschnitt des Rack Mount.
- Entfernen Sie die Blindkappen mit kräftigen Druck von der Rückseite her aus dem CPE blackline Rack Mount Plus, führen Sie die Buchsen und ggf. eine zusätzliche optische Kupplung (nicht im Lieferumfang) von hinten in die Ausschnitte des CPE blackline Rack Mount Plus ein und verschrauben Sie Buchsen und Kupplung von vorne (③). Für die Befestigung der optischen Kupplung benutzen Sie geeignete, selbstschneidende M2,5 Linsenkopfschrauben. Verbinden Sie dann die Kabel mit den entsprechenden Anschlüssen am Gerät.
- Verwenden Sie die beiliegenden M6×18 Linsenkopfschrauben mit den dazugehörigen Rosetten zur Montage in einem 19"-Rack.

Hinweise

- Achten Sie stets auf eine ausreichende Belüftung und lassen Sie nach Möglichkeit Abstand zu weiteren 19"-Einschüben.
- Den zulässigen Temperaturbereich Ihres LANCOM Gerätes finden Sie im entsprechenden Produktdatenblatt.

Explanations

- Use the enclosed mounting brackets and the M3×6 Torx combination screws with serrated lock washers to fix the LANCOM device in the CPE backline Rack Mount Plus (①, ②). The front panel of the device is correctly positioned **behind** the rack mount cutout.
- Remove the blind caps with strong pressure from the rear side from the CPE blackline Rack Mount Plus, insert the sockets and, if necessary, an additional optical coupling (not included in the scope of delivery) from the rear into the cutouts of the CPE blackline Rack Mount Plus and screw the sockets and coupling from the front (③). For mounting the optical coupling, use suitable, self-tapping M2.5 pan-head screws. Then connect the cables to the corresponding connectors on the device.
- Use the enclosed M6×18 pan-head screws with the corresponding rosettes for mounting in a 19" rack.

Notes

- Always ensure sufficient ventilation and leave a distance to other 19" devices, if possible.
- The permissible operating temperature range for your LANCOM product can be found in the respective product data sheet.

LANCOM Systems GmbH | A Rohde & Schwarz Company | Adenauerstr. 20/B2 | 52146 Wuerselein | Germany | info@lancom.de | www.lancom-systems.com

© 2026 LANCOM, LANCOM Systems, LCOS, LANcommunity, LANCOM Service LANcare, LANCOM Active Radio Control and AirLancer sind eingetragene Marken. Alle anderen verwendeten Namen und Bezeichnungen können Marken oder eingetragene Marken ihrer jeweiligen Eigentümer sein. Dieses Dokument enthält zukunftsbezogene Aussagen zu Produkten und Produkteigenschaften. LANCOM Systems behält sich vor, diese jederzeit ohne Angaben von Gründen zu ändern. Keine Gewähr für technische Ungenauigkeiten und / oder Auslassungen. © 2026 LANCOM, LANCOM Systems, LCOS, LANcommunity, LANCOM Service LANcare, LANCOM Active Radio Control, and AirLancer are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and/or omissions. 112281 01/2026



LANCOM
SYSTEMS